

PRODUCT INFORMATION

- Operation: hand
- **Range:** S M
- Fitting: ceiling
- Colours: white RAL 9016; special colours or anodised aluminum possible
- Fabrics: refer to Silent Gliss fabric collection

Features:


- Suitable for schools, hospitals, retirement homes, etc.
- Yellow gliders release from profile when weight limit is exceeded (4 6 kg)
- Blue glider releases at higher weight limit (8 10 kg) due to higher pulling force at curtain leading edges




SYSTEM SPECIFICATIONS



Profile information

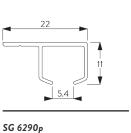

SG 6290p Profile

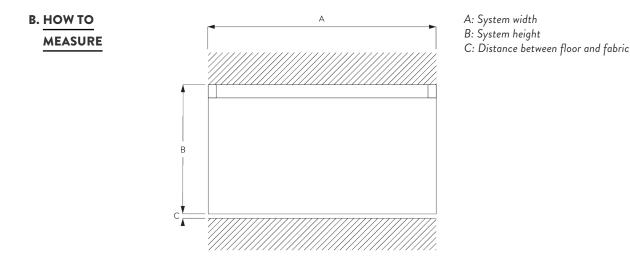

C. SPECIFICATION TEXT **Silent Gliss SG 6290 Hand Operated Curtain Track.** Comprises aluminium SG 6290 profile supplied made to measure powder coated white with safety gliders SG 6148 (10/m) and SG 6149 (2/length) secured with end covers SG 6122 at either end. Ceiling fixed with self-drilling wood screws.

FITTING

A. FITTING INFORMATION

For detailed fitting information, visit the Silent Gliss website.


Fixing points






B. CEILING FITTING


Direct fitting

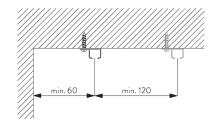

SYSTEM SAFETY KEY PARTS

A. SAFETY RELEASE FUNCTION





- B: Glider deformes under pressure
- C: Release under following pull weights: Glider SG 6148 yellow: releases between 4 - 6 kg Glider SG 6149 blue: releases between 8 - 10 kg

6122 6149 6290 SG 6122: Endstop (with end glider SG 6148 in place)

SG 6021 / SG 6290 system can assist in the prevention of self harm in hospitals, schools and psychiatric situations. Please see specific pull out weights on individual gliders. Please also note that the longer the individual track and the more gliders used, the cumulative total pull-out weight when in a stacked position will increase and therefore support more weight.

A risk assessment of the area should always be carried out.



PARTS

A. STANDARD PARTS

 SG 6122

 End stop

 SG 6148

 Safety Glider - yellow

 SG 6149

 Safety glider - blue

 SG 6290p

Profile

B. OPTIONAL PARTS

